

TELIS TRANSMITTERS

DESCRIPTION

The Telis Transmitters (single or four channel) are hand-held radio transmitters compatible with RTS Motors and external RTS receivers such as Centralis or HRC-RF. Each transmitter can operate any number of motors or receivers, while each motor or receiver will memorize up to 12 transmitters. The four channel transmitter can be used for group and individual control of window treatments.



MECHANICAL SPECIFICATIONS

Overall Dimensions: L: 4 $\frac{3}{4}$ in. W: 1 $\frac{3}{4}$ in. D: $\frac{3}{4}$ in.

Operating Temperature: 41°F to 104°F

Typical Range (Optimal Conditions): 65 ft.

ELECTRICAL SPECIFICATIONS


Power: 3V Lithium battery, Cr2430

Frequency: 433.42 Mhz

GENERAL OPERATING INSTRUCTIONS

NOTE: Please Consult RTS Motor or Receiver Instructions for Specific Product Details.

1. Place the RTS Motor or Receiver in Programming Mode as described in the Operating Instructions.
2. Press the programming button on the back of the Telis transmitter to program it in the memory of the RTS Motor or Receiver.
3. Pressing the UP button will raise the window covering, while pressing the DOWN button will lower it. To stop the window covering, simply press the STOP button.
4. Pressing the Channel Selector button on the four channel transmitter will switch between channels 1 through four and the group (or fifth) channel. The corresponding LEDs will light to indicate the channel selected.

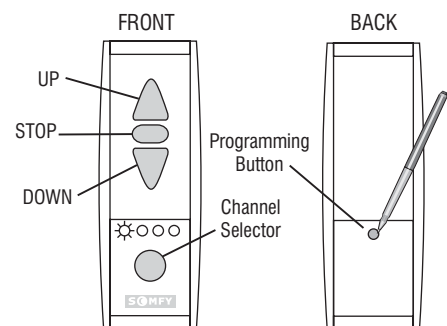

ORDERING INFORMATION

Description	Catalog Number
Telis Transmitter (Single Channel)	6301014
Telis4 Transmitter (Four Channel)	6301015